


# Setting up the iotspot Hub as a meeting room solution


## List of components

- A0 - Backplate x1
- A1 - Hub Ring x1
- B0 - iotspot Hub x1
- C0 - Hub Ring screws x2
- C1 - Solution screw block x2
- C2 - Solution hanging cables x2

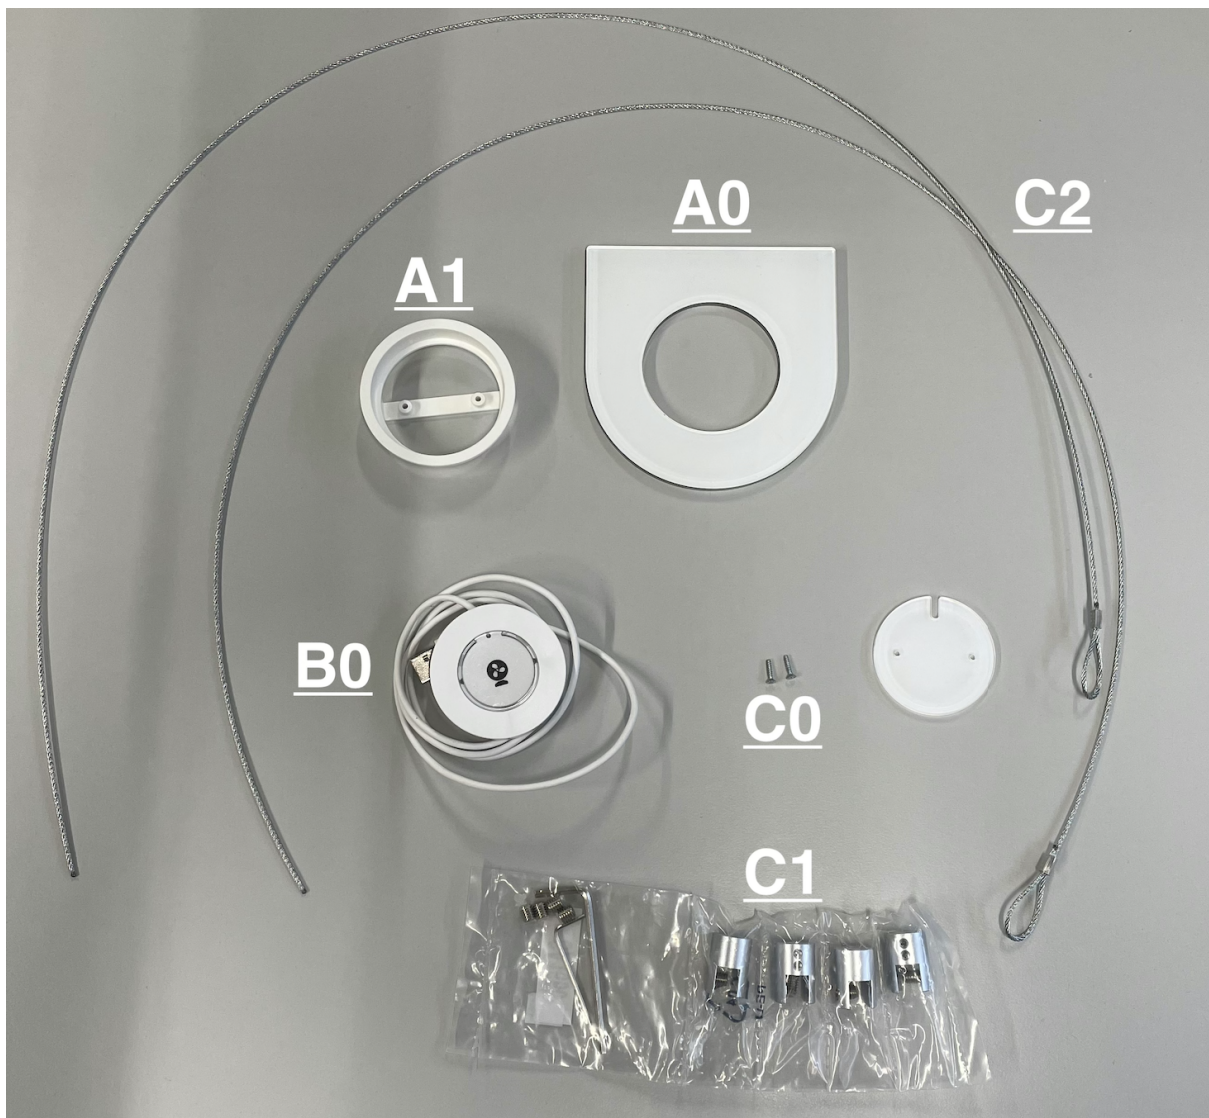


## Setup steps

1. Place the Hub Ring (A1) into the Backplate (A0). Make sure the screw holes are horizontally aligned. The components should click firmly into place.

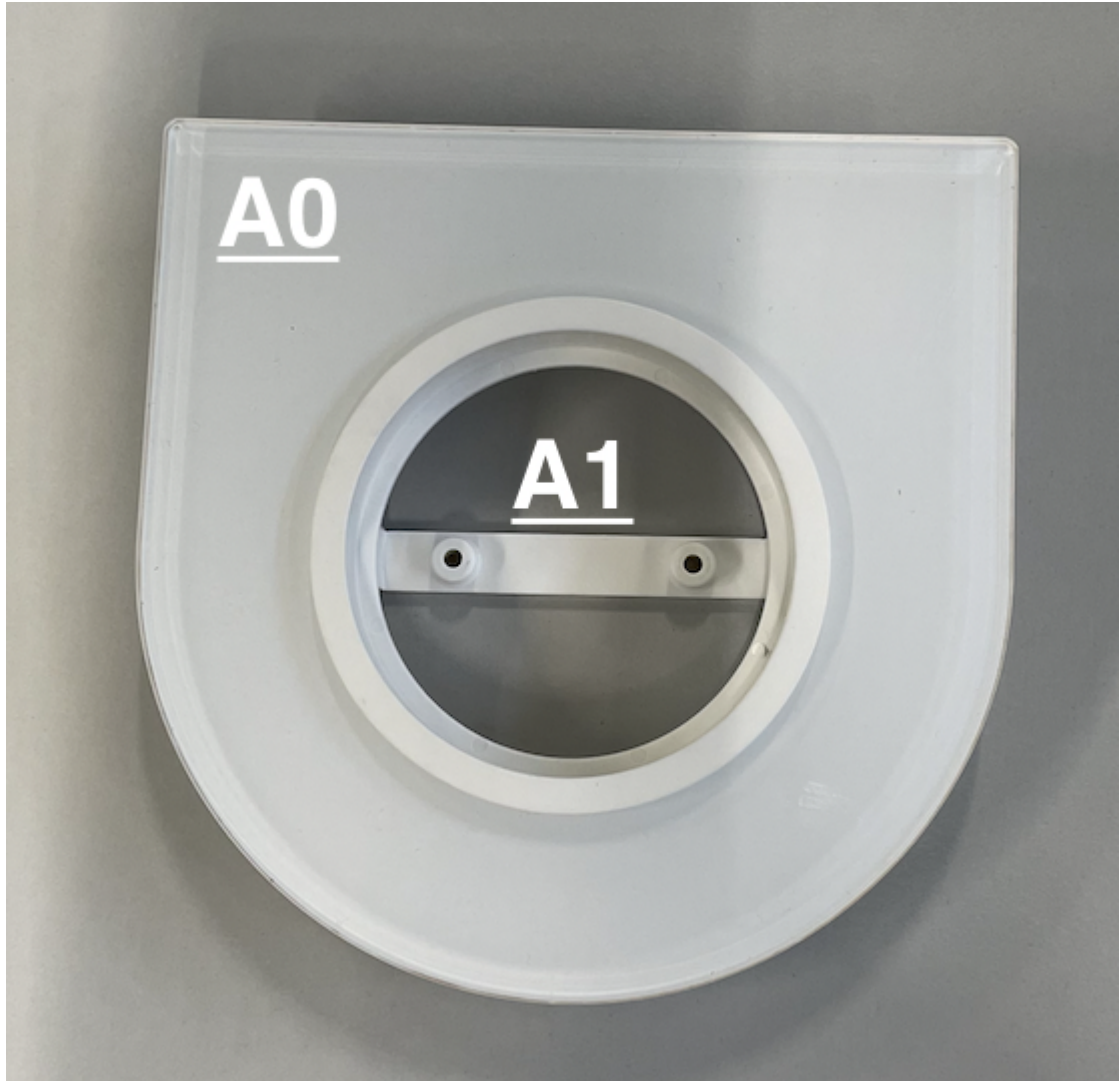

2. Place iotspot Hub (B0) into the Hub Ring (A1). Make sure the screw holes are aligned with the screw holes of the Hub Ring (A1).

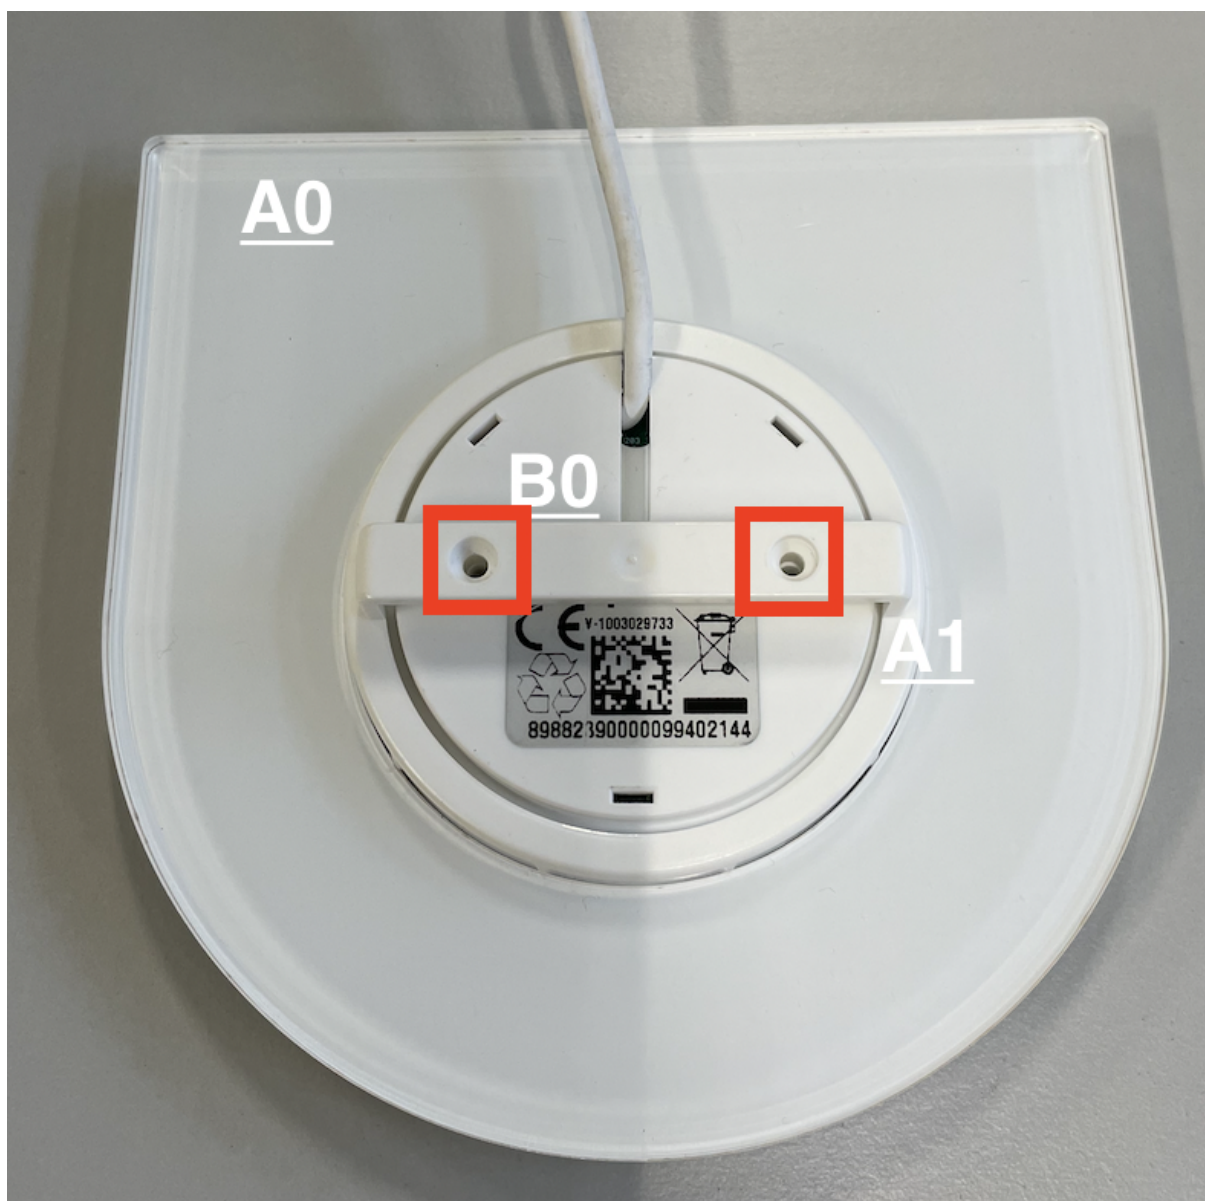

A0

B0

A1

CE V-1003029733  
89882390000099402144



The iotspot Hub should fit fully into the Hub Ring slot.







3. Screw the Hub Ring screws (C0) into the Hub Ring screw holes.



4. Loosen the small screws on the side of the Solution screw block (C1).

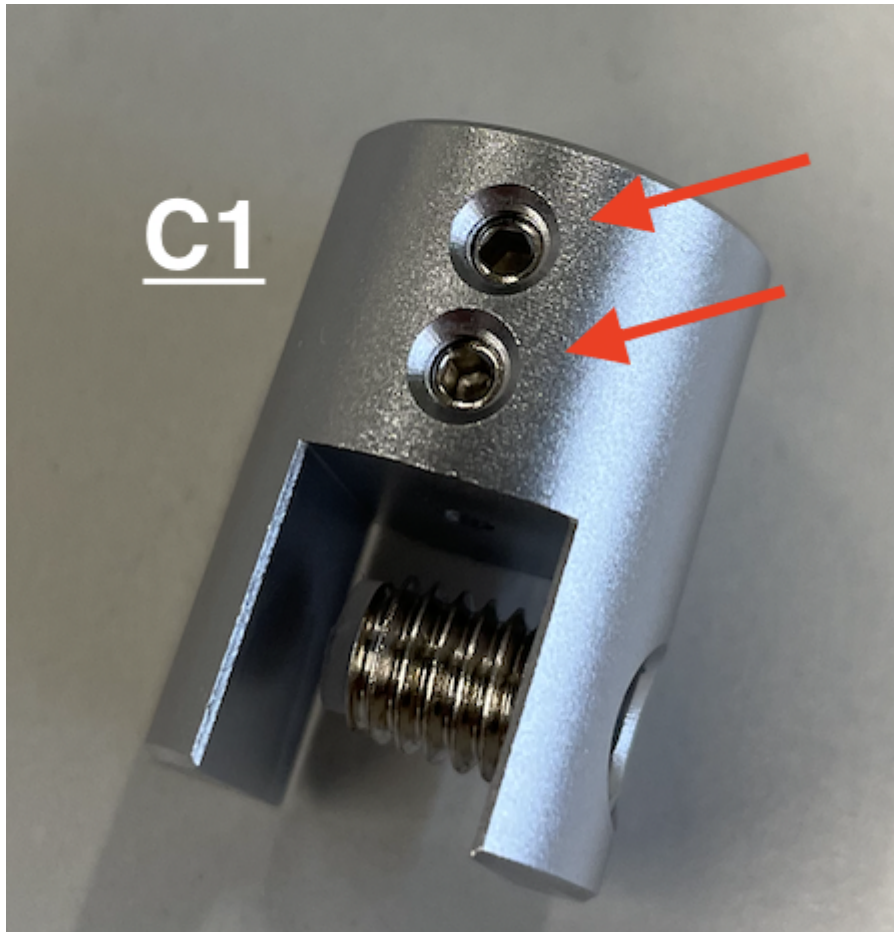


5. Insert a Solution hanging cable (C2) into the Solution screw block (C1). The end of the cable should align with the hole on the other side without sticking out.

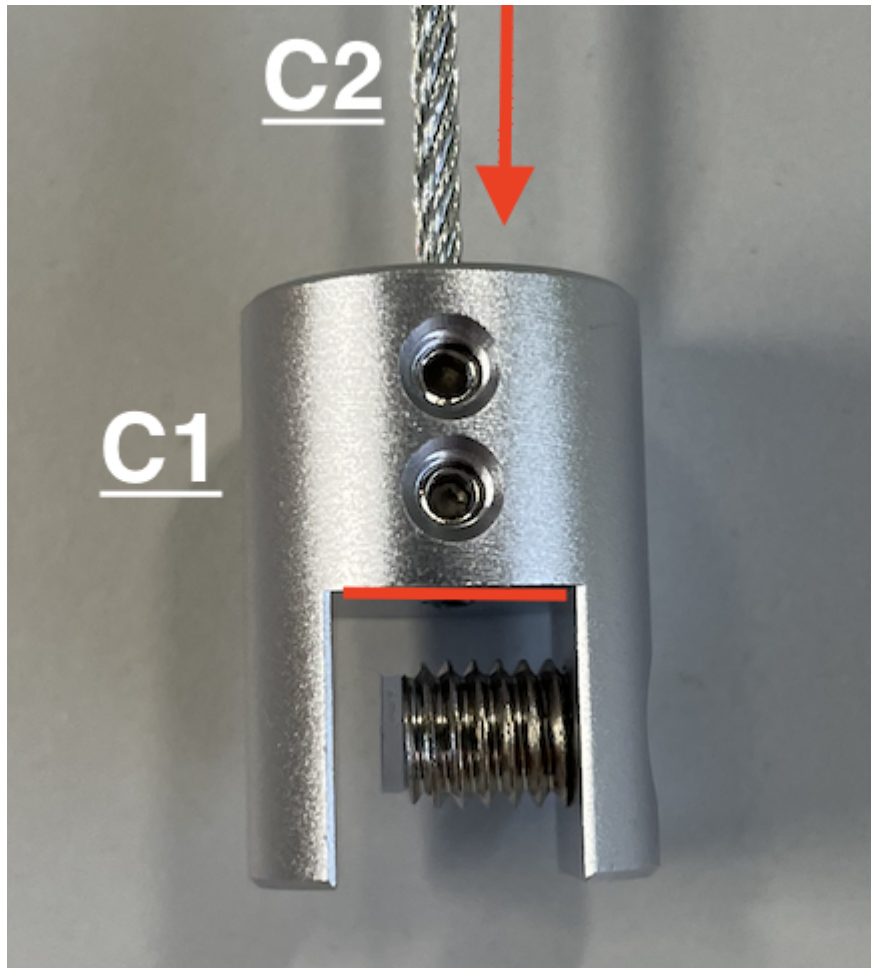




6. Tighten the small screws on the side of the Solution screw block (C1), securing the hanging cable in place.

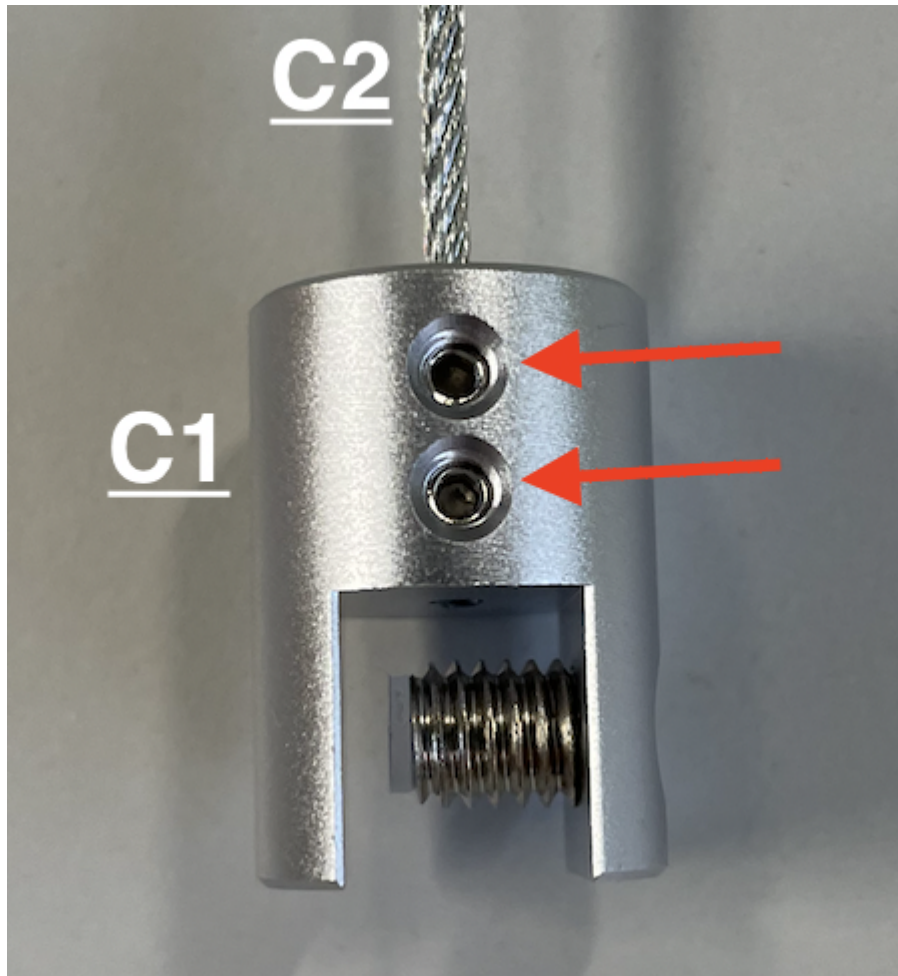

7. Loosen the big screw on the bottom of the Solution screw block (C1).

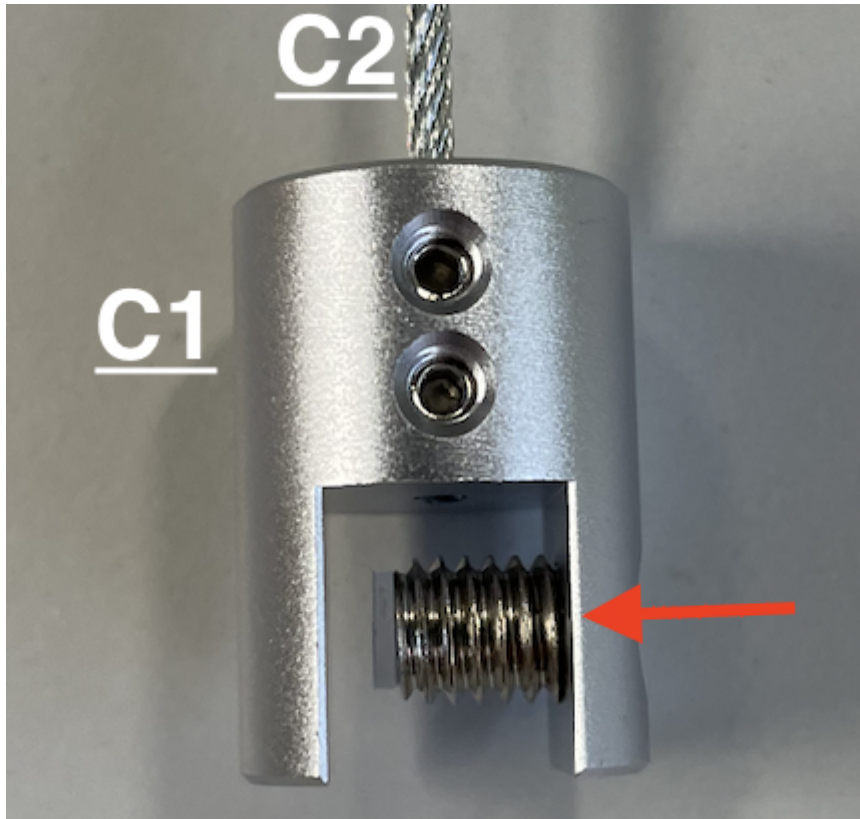

8. Place the Solution screw block (C1) over the edge of the Backplate (A0), approximately 5 mm off the side.



9. Tighten the big screw on the bottom of the Solution screw block (C1) securing the Solution screw block (C1) to the Backplate (A0).
10. Repeat steps 3-8 for the other side of the Backplate (A0)



The setup of the iotspot Hub Room Solution is now complete! Hang the iotspot Hub Room Solution according to the product sheet and your environment specifications.

